

Netzer states

Some Netzer modules like [The SPI slave protocol](#) and the [process module](#) can access the common state of the Netzer module.

State	Value	Description
NETZER_STARTING	0x00	Netzer is starting, bootup.
NETZER_NOLINK	0x01	Netzer is idle but has no network link.
NETZER_IP_ERROR	0x02	Netzer has network link but no valid IP address.
NETZER_READY	0x03	Netzer is ready and has a valid IP address.
NETZER_SHUTDOWN	0x04	Netzer is shutting down right now.

From:

<http://mobacon.de/wiki/> - MoBaCon Wiki

Permanent link:

<http://mobacon.de/wiki/doku.php/en/netzer/states>

Last update: **2014/02/09 13:32**

