

Access control

Since Version 1.3 a Networker web access must be authorized with username and password. Since version 1.4 the feature is included in the pro versions only.

The screenshot shows a web interface with a red header. Below the header, there is a table with the following data:

User name	Active	Rights	
admin	Yes	Administrator	Configure...
user	Yes	IOs can be changed	Configure...
guest	Yes	Read-only access	Configure...

Three different user accounts are differentiated:

- **Administrator** (Standard username: admin, Password: admin). This user is allowed to do everything (including user administration). This account **cannot** be deactivated.
- **User** (Standard username: user, Password: user). This user has read only access to the start page; blinking, restarting and shutting down Networker is also allowed. Also the GPIO page can be accessed, control of IOs is possible, but not the direction. This account can be deactivated by administrator.
- **Guest** (Standard username: guest, Password: guest) Guest has read only access to the start and GPIO pages. This account can be deactivated by administrator.


The screenshot shows a user administration dialog box with the following fields and buttons:

- User name:
- Old password:
- New password:
- Repeat new password:
- Buttons:
- Message: An empty password disables user.

Do not forget to alter usernames and passwords in the user administration dialog!

Usernames and password can be up to 8 characters long. An empty password disables the account.

 Since version 1.4 pro the users are also used for the [GPIO server](#).



Last update:
2025/06/11 20:42

en:netzer:accesscontrol <https://www.mobacon.de/dokuwiki/doku.php?id=en:netzer:accesscontrol&rev=1321276393>

From:
<https://www.mobacon.de/dokuwiki/> - **MoBaCon**

Permanent link:
<https://www.mobacon.de/dokuwiki/doku.php?id=en:netzer:accesscontrol&rev=1321276393>

Last update: **2025/06/11 20:42**

