


# Access control

Since Version 1.3 a Netwerker web access must be authorized with username and password. Since version 1.4 the feature is included in the pro versions only.

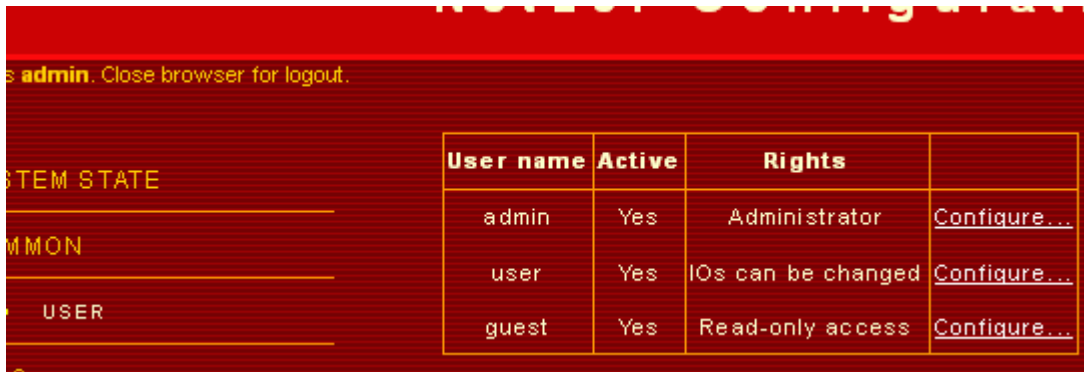


The screenshot shows a web interface with a red header. Below the header, there is a notification: "s admin. Close browser for logout." Below this, there is a table with the following columns: "User name", "Active", "Rights", and an unlabeled column with "Configure..." links. The table contains three rows of user data.

| User name | Active | Rights             |                              |
|-----------|--------|--------------------|------------------------------|
| admin     | Yes    | Administrator      | <a href="#">Configure...</a> |
| user      | Yes    | IOs can be changed | <a href="#">Configure...</a> |
| guest     | Yes    | Read-only access   | <a href="#">Configure...</a> |

It is differentiated between three different user accounts:

- **Administrator** (Standard username: admin, Password: admin). This user is allowed to do everything (including user administration). This account **cannot** be deactivated.
- **User** (Standard username: user, Password: user). This user has read only access to the start page; blinking, restarting and shutting down Netwerker is also allowed. Also the GPIO page can be accessed, control of IOs is possible, but not the direction. This account can be deactivated by the administrator.
- **Guest** (Standard username: guest, Password: guest) Guest has read only access to the start and GPIO pages. This account can be deactivated by the administrator.

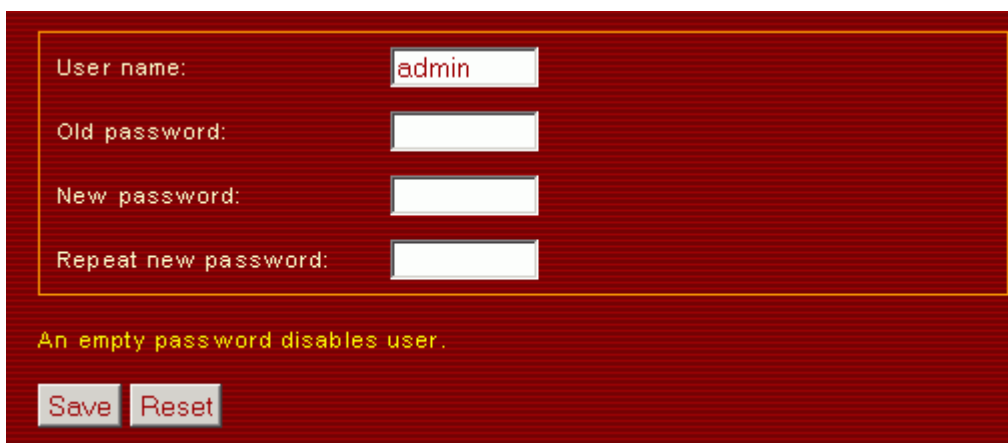

The screenshot shows a user administration dialog box with a red background. It contains four input fields: "User name:" with the value "admin", "Old password:", "New password:", and "Repeat new password:". Below the fields, there is a message: "An empty password disables user." At the bottom, there are two buttons: "Save" and "Reset".

Do not forget to alter usernames and passwords in the user administration dialog!

Usernames and password can be up to 8 characters long. An empty password disables the account.

The base HTTP authentication is used. If you want to connect your Netzer with Internet you should notice: **\*\*All usernames and passwords are transmitted as base64. That is in fact plain text!**

Since version 1.4 pro the users are also used for the [GPIO server](#).

From:  
<https://www.mobacon.de/dokuwiki/> - **MoBaCon**

Permanent link:  
<https://www.mobacon.de/dokuwiki/doku.php?id=en:netzer:accesscontrol&rev=1323021302>

Last update: **2025/06/11 20:42**

