

Access control

Since Version 1.3 a Netwerker web access must be authorized with username and password. Since version 1.4 the feature is included in the pro versions only.




The screenshot shows a web interface with a red header. Below the header, there is a table with the following columns: User name, Active, Rights, and a link to 'Configure...'. The table lists three users: 'admin' (Active: Yes, Rights: Administrator), 'user' (Active: Yes, Rights: IOs can be changed), and 'guest' (Active: Yes, Rights: Read-only access). To the left of the table, there are sections for 'SYSTEM STATE', 'COMMON', and 'USER'.

User name	Active	Rights	
admin	Yes	Administrator	Configure...
user	Yes	IOs can be changed	Configure...
guest	Yes	Read-only access	Configure...

It is differentiated between three different user accounts:

- **Administrator** (Standard username: admin, Password: admin). This user is allowed to do everything (including user administration). This account **cannot** be deactivated.
- **User** (Standard username: user, Password: user). This user has read only access to the start page; blinking, restarting and shutting down Netwerker is also allowed. Also the GPIO page can be accessed, control of IOs is possible, but not the direction. This account can be deactivated by the administrator.
- **Guest** (Standard username: guest, Password: guest) Guest has only access to the start and GPIO pages by reading. This account can be deactivated by the administrator.

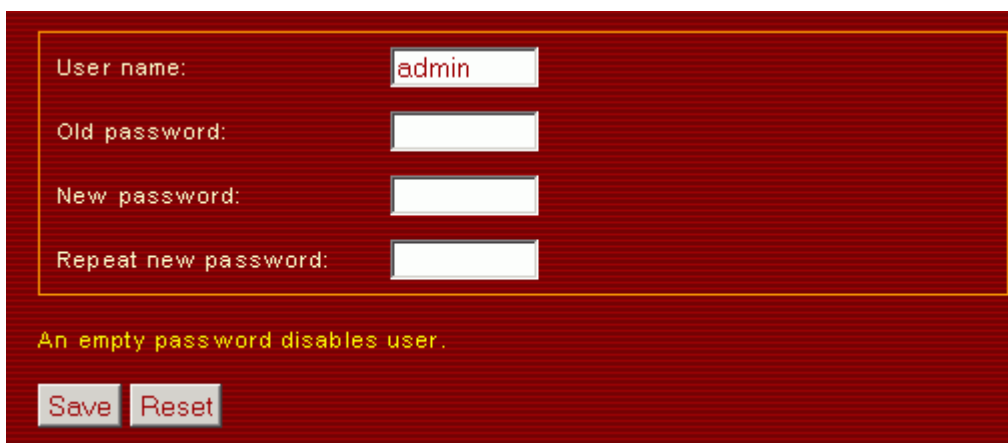

The screenshot shows a user administration dialog box with a red background. It contains four input fields: 'User name:' (with 'admin' entered), 'Old password:', 'New password:', and 'Repeat new password:'. Below the fields, there is a message: 'An empty password disables user.' and two buttons: 'Save' and 'Reset'.

Do not forget to alter usernames and passwords in the user administration dialog!

Usernames and password can be up to 8 characters long. An empty password disables the account.

The base HTTP authentication is used. If you want to connect your Netzer with Internet you should notice: ****All usernames and passwords are transmitted as base64. That is in fact plain text!**

Since version 1.4 pro the users are also used for the [GPIO server](#).

From:
<https://www.mobacon.de/dokuwiki/> - **MoBaCon**

Permanent link:
<https://www.mobacon.de/dokuwiki/doku.php?id=en:netzer:accesscontrol&rev=1323021436>

Last update: **2025/06/11 20:42**

