

Netzer states

Some Netzer modules like [SPI Slave](#) and the [process module](#) can access the common state of the Netzer module.

State	Value	Description
NETZER_STARTING	0x00	Netzer is starting, bootup.
NETZER_NOLINK	0x01	Netzer is idle but has no network link.
NETZER_IP_ERROR	0x02	Netzer has network link but no valid IP address.
NETZER_READY	0x03	Netzer is ready and has a valid IP address.
NETZER_SHUTDOWN	0x04	Netzer is shutting down right now.

From:

<https://www.mobacon.de/dokuwiki/> - **MoBaCon**

Permanent link:

<https://www.mobacon.de/dokuwiki/doku.php?id=en:netzer:states&rev=1352295204>

Last update: **2025/06/11 20:42**

