

# Netzer pin map



## Overview

### Pins of pin header JP1

Name	Description
INT	GPIO pins, see <a href="#">IO</a> for more information.
CLK	
MI	
MO	
CS	
IO4	
IO5	
IO3	
VA2	Connection for <a href="#">Power-over-Ethernet</a> . That is the center tap of the Ethernet coil between RJ45 pins 3 and 6.
VB2	Connection for <a href="#">Power-over-Ethernet</a> . This pin is directly connected to the network jack of Netzer (RJ45 pins 7 and 8).


### Pins of pin header JP2

Name	Description
RST	Use this pin to reset Netzer. The signal is low active (this means 0 resets Netzer). The Reset signal can also be used for waking up Netzer from sleep mode (after shut down). The pin is optional and can be left open.
3V3	Pin for power supply. Minimum voltage is 3.1 V. Maximum voltage is 3.6 V.
GND	Ground potential.

Name	Description
IO0	GPIO pins, see <a href="#">IO</a> for more information.
IO1	
IO2	
TX	
RX	
VA1	Connection for <a href="#">Power-over-Ethernet</a> . That is the center tap of the ethernet coil between RJ45 pins 1 and 2.
VB1	Connection for <a href="#">Power-over-Ethernet</a> . This pin is directly connected to the network jack of Netzer (RJ45 pins 4 and 5).

## Power-over-Ethernet (PoE)

The four connections VA1, VA2, VB1 and VB2 are connections from the network socket where a Power-over-Ethernet supply can be connected to.

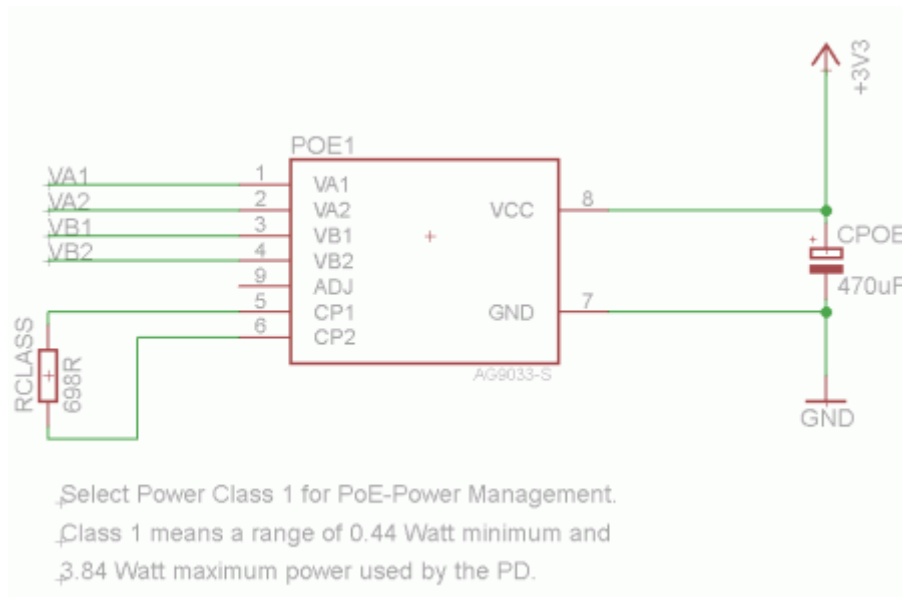

The image shows an example circuit. Here the PoE supply AG9033 of Silver Telecom is used.

From: <http://www.mobacon.de/dokuwiki/> - **MoBaCon**

Permanent link: <http://www.mobacon.de/dokuwiki/doku.php?id=en:netzer:pins&rev=1324464181>

Last update: **2025/06/11 20:42**

