2025/12/03 21:53 1/3 Getting started with Netzer


Getting started with Netzer

Connect Netzer

Power supply

For the first tries Netzer should be put on a breadboard or our Netzer Playground.

A power supply with 3.3V is needed. Connect it to the power supply pins of the Netzer:

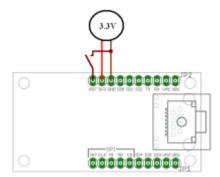

As an alternative the Netzer can be supplied with PoE if the Netzer Playground is used. In that case Netzer is supplied by the network connection.

Reset

For the (optional) reset signal a simple switch can be used. The switch connects the reset to ground if pressed. No resistors are needed.


Programming connection

Netzer - if ordered here - is installed with a bootloader. Hence, new firmware can be flashed via network (used protocol is TFTP) and a special programming device is not needed.

If own firmware should be developed and debugged or is the bootloader broken or missing, the firmware can be flashed with Microchip ICD (or clone). The versions ICD2 and ICD3 have been tested so far and work well. You can give us feedback about other programming adapters you successfully tried out.

The programming device is connected to Netzer like:

- 1. Connect the power supply pins like described above.
- 2. The reset pin is connected with VPP/MCLR pin on the programming device.
- 3. The communication wires PGC and PGD must be soldered to the pads like shown in the picture they are not connected to the Netzer pinheaders:

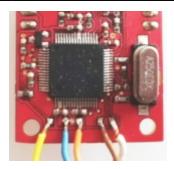

- 4. PGD is white, PGC is brown.
- 5. Power supply and VPP (3.3V = Orange, GND = Blue, VPP/MCLR = Yellow) can also be soldered to the appropriate pads if needed.

Network connection

For a PC direct connection a crossover cable must be used. If router, switch or hub is used just use a normal patch cable.

Other connections

Further connections are optional and can be used for connecting peripheral devices.

Powering on

Bootloader

Right after switching on power the bootloader is active in Netzer. The bootloader signals activity on the fast blinking network LED. Left or right LED depends on the bootloader version.

After a few seconds the firmware is activated if any installed. If none is installed the bootloader stays active. In that case the Netzer stays connectable at the fix IP address **192.168.97.60**.



Netzer supports only ARP and TFTP in Bootloader mode, no ICMP. Hence, Netzer can **not** be pinged at 192.168.97.60.

Firmware

IP address

MoBaCons Netzer firmware (i.e. IO) has no IP address per default. It tries to obtain an IP address from

2025/12/03 21:53 3/3 Getting started with Netzer

DHCP server. If no server is found it uses a so-called auto IP in the area 169.254.X.X.

MDNS

The exact IP address is not relevant for first connections. The simplest way is to connect to the network name (per MDNS). For that reason bonjour from Apple should be installed on the PC (can also be found for Linux or Windows).

Firefox



Comfortable Netzer discovery is possible with Firefox browsers and the installed DNSSD-Plugin. This plugin maintains all found web pages of MDNS devices in a list. Netzer has a name like *nexxyyzz.local*. *xxyyzz* are the last three numbers of its MAC address. The name can later be changed on the Netzer web sites.

